




LIGHTWEIGHT CARBON FIBER CRANKSET INSTALLATION INSTRUCTION

Thank you for purchasing an INCOLOR System

This product is warranted against all defects in material or workmanship to the original owner for 3 years from the date of purchase. The warranty covers any faults in manufacture and materials, but excludes damages caused by improper use and the results of reasonable wear and tear sustained over the life of the product. For warranty claims please contact your retailer or contact INCOLOR directly



INSTALLATION AND DISASSEMBLY DIAGRAM

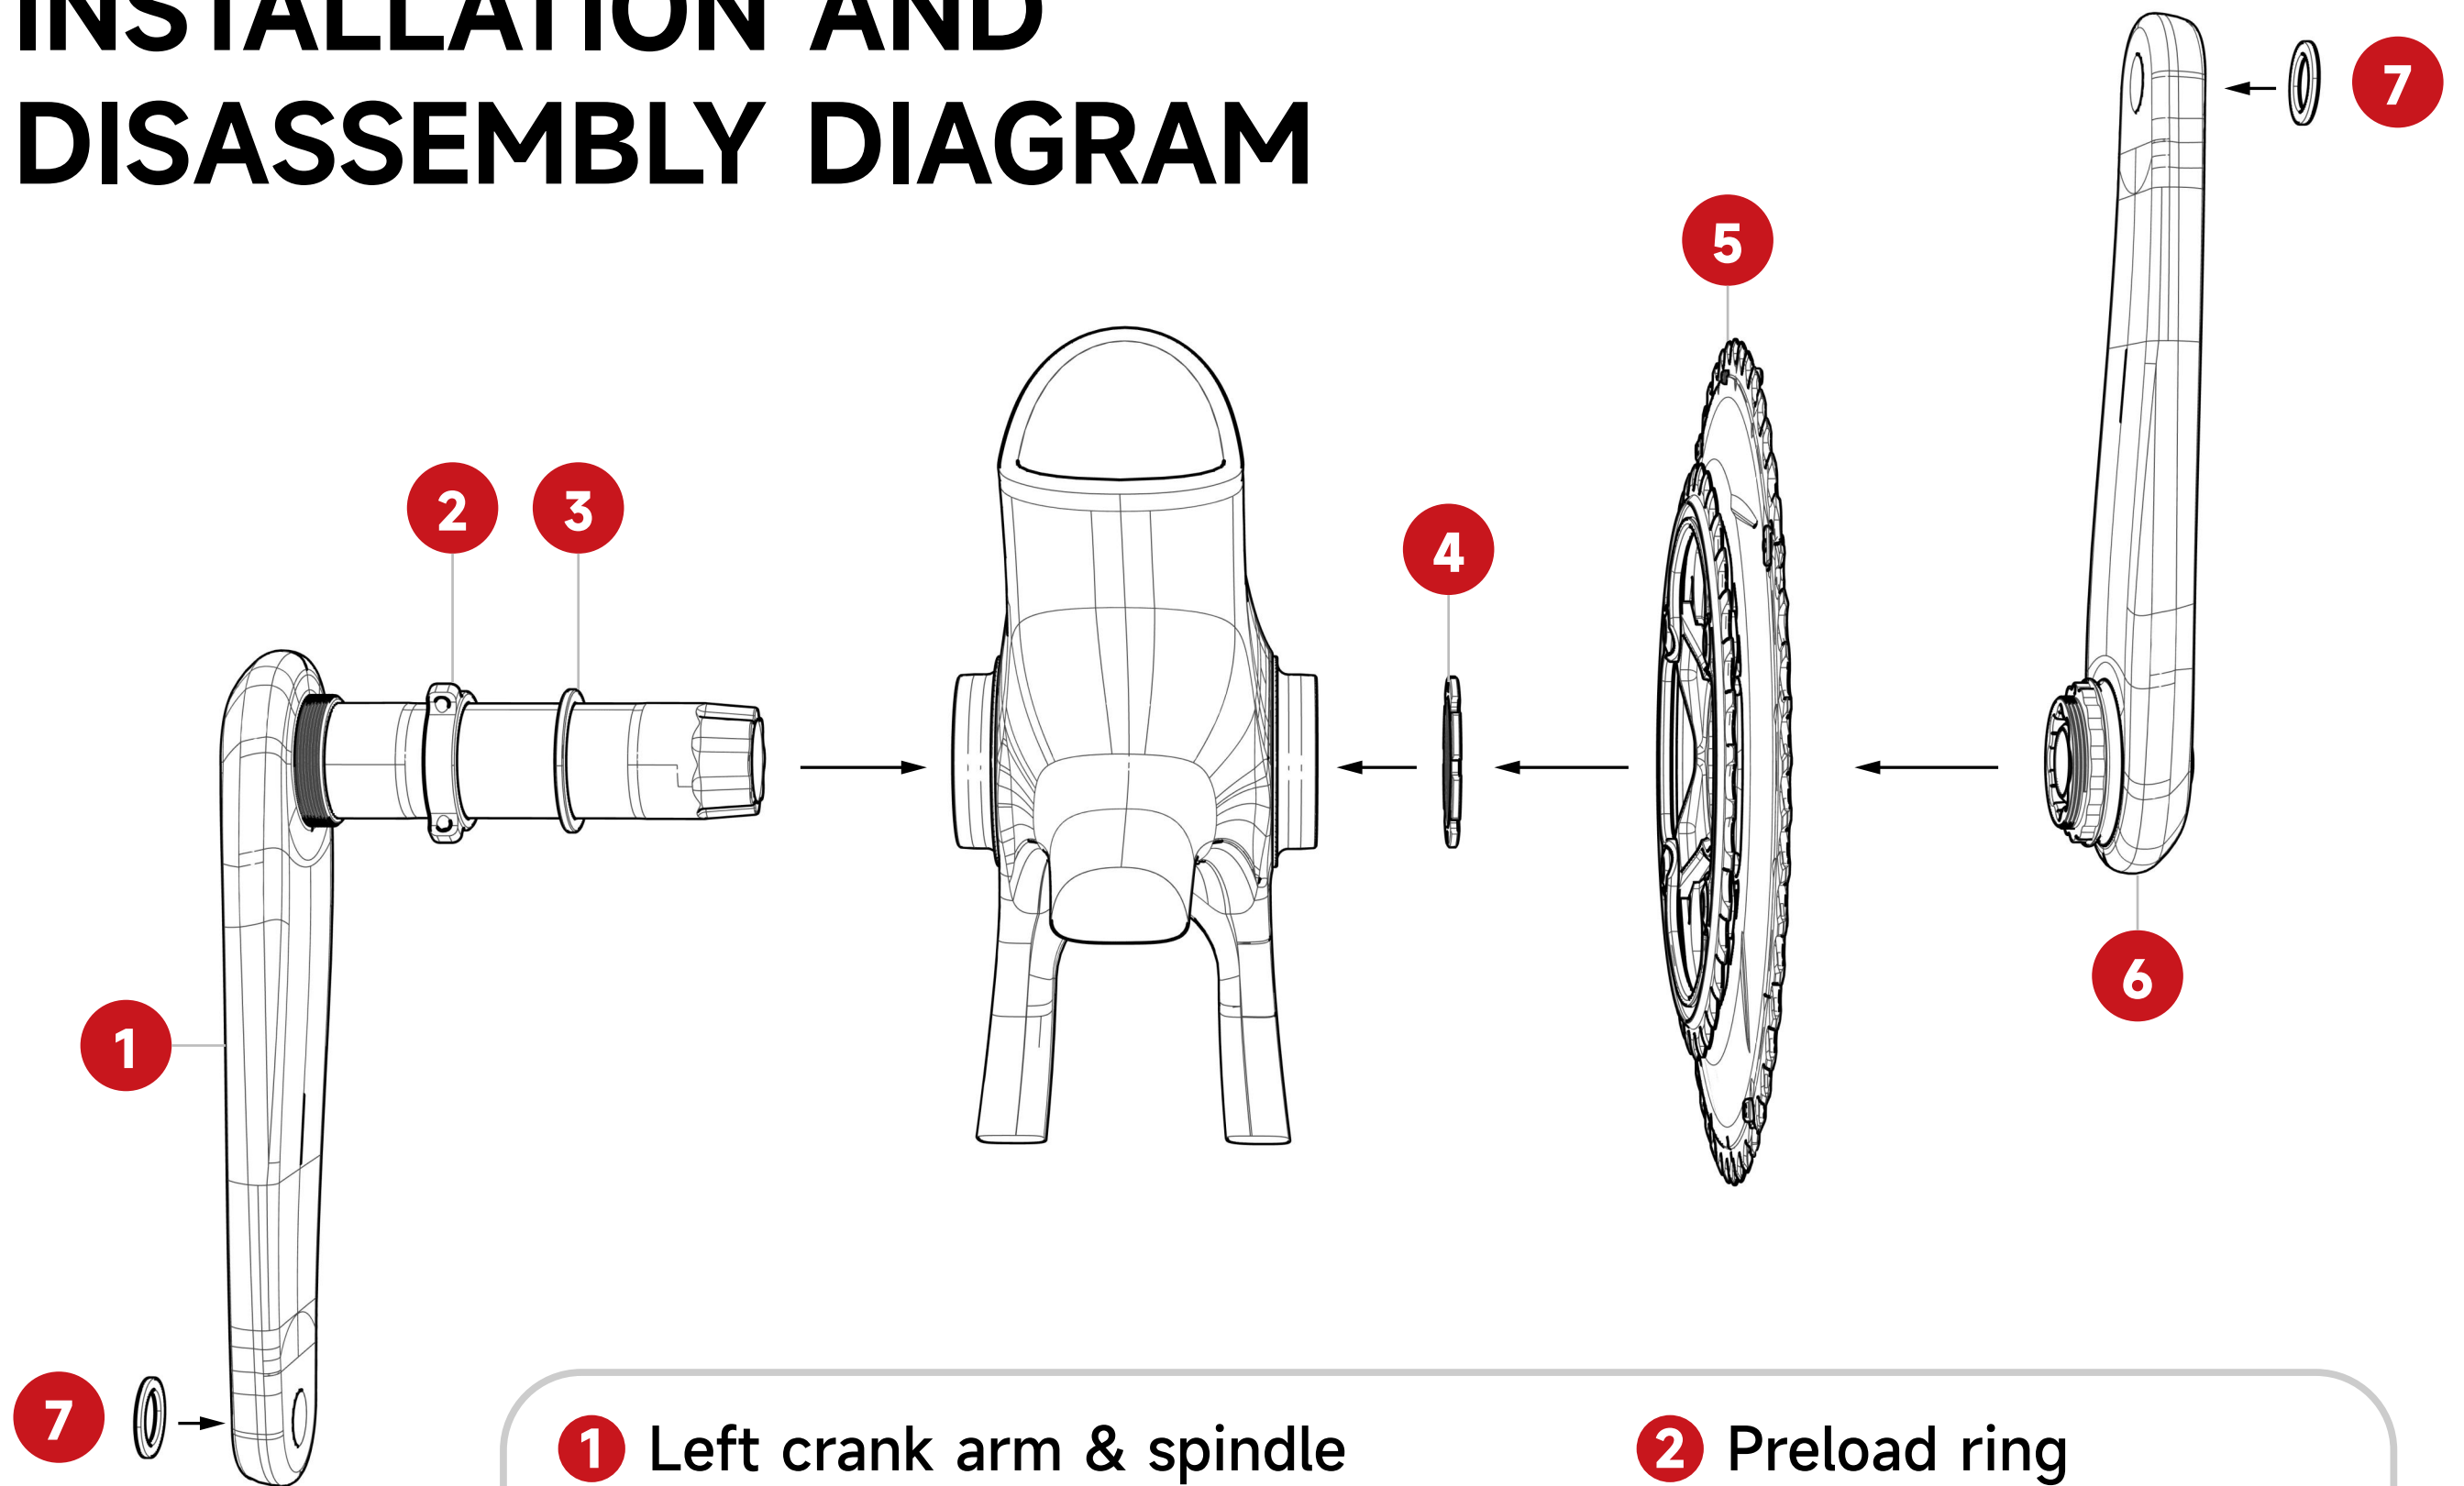

1 Left crank arm & spindle

3 Spindle spacer

5 Chainring & spider assembly

7 Pedal spacer


2 Preload ring

4 Spider lock ring

6 Right crank arm


STEP 1

Place the chainring & spider assembly on the right crank arm, then tighten the lock ring to 40Nm approximatly.

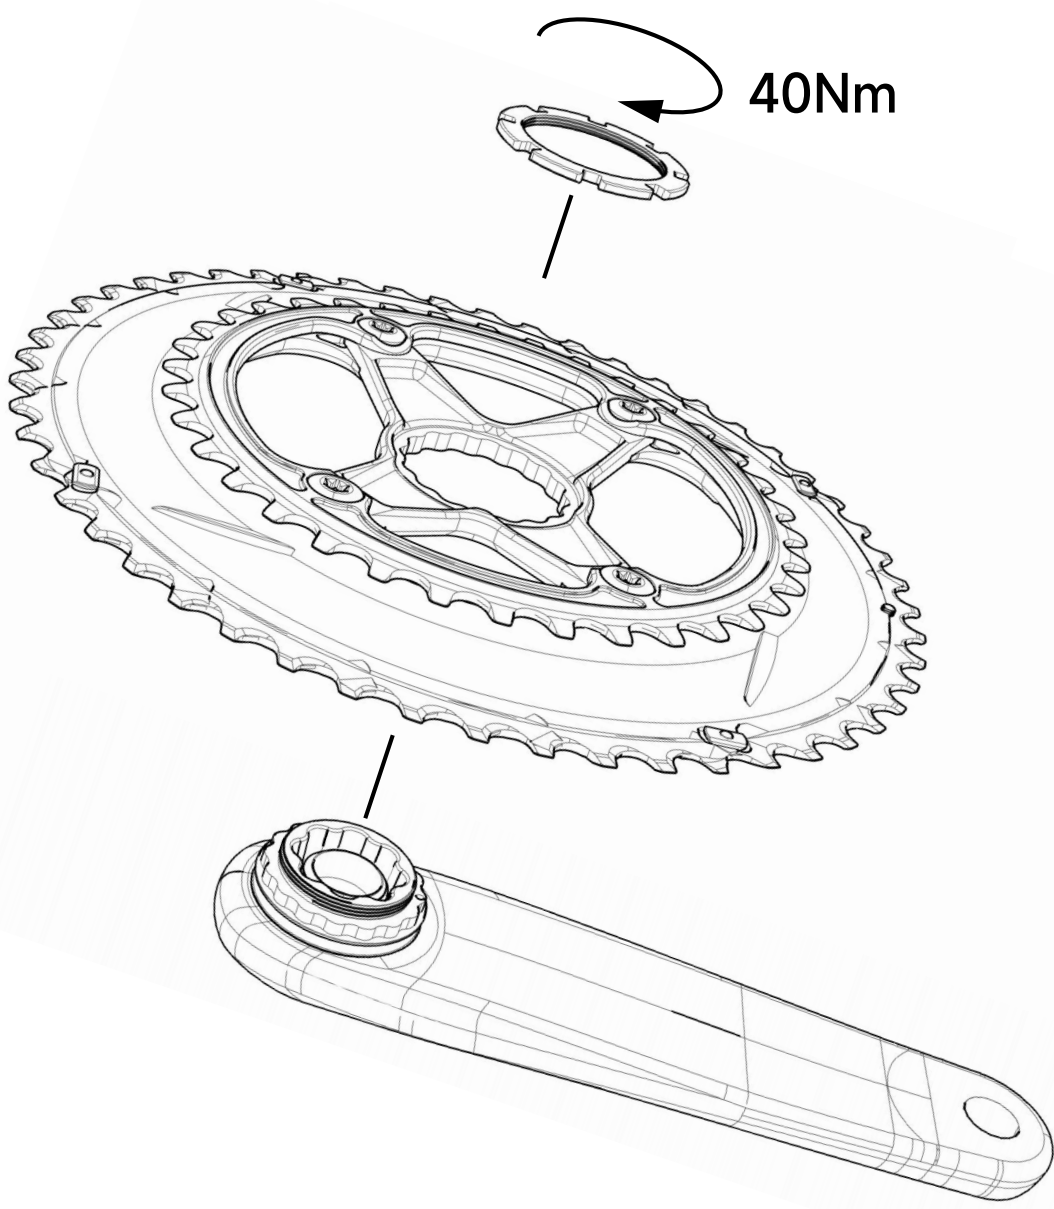


STEP 2

Install the dual-threaded bolt into the right crank arm from inside, then tighten it into the bottom.

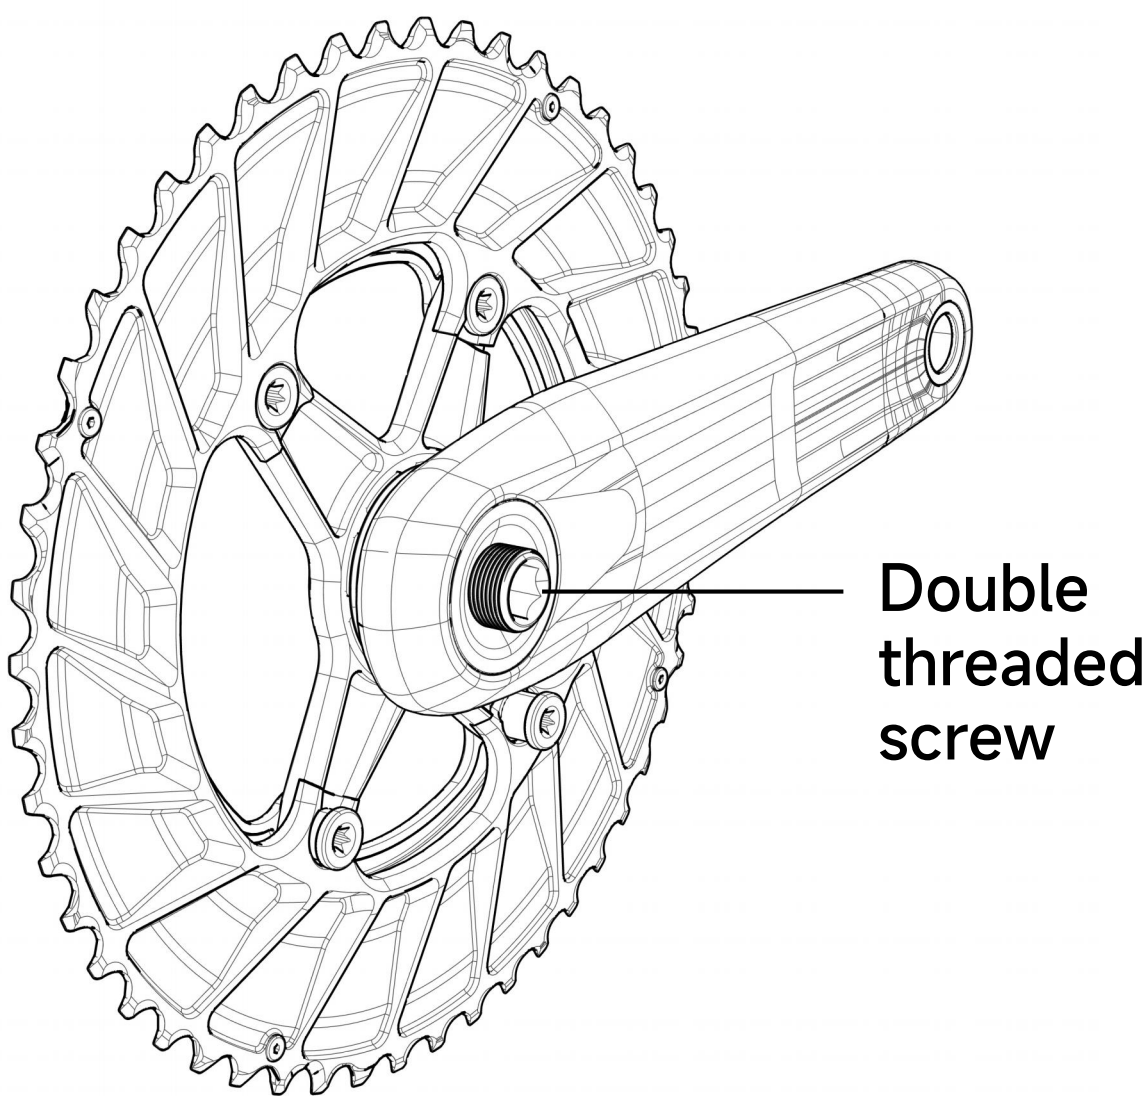


STEP 3 Tighten the preload ring into the bottom, add a spindle spacer on the left side, then install the left crank arm assembly into the frame.

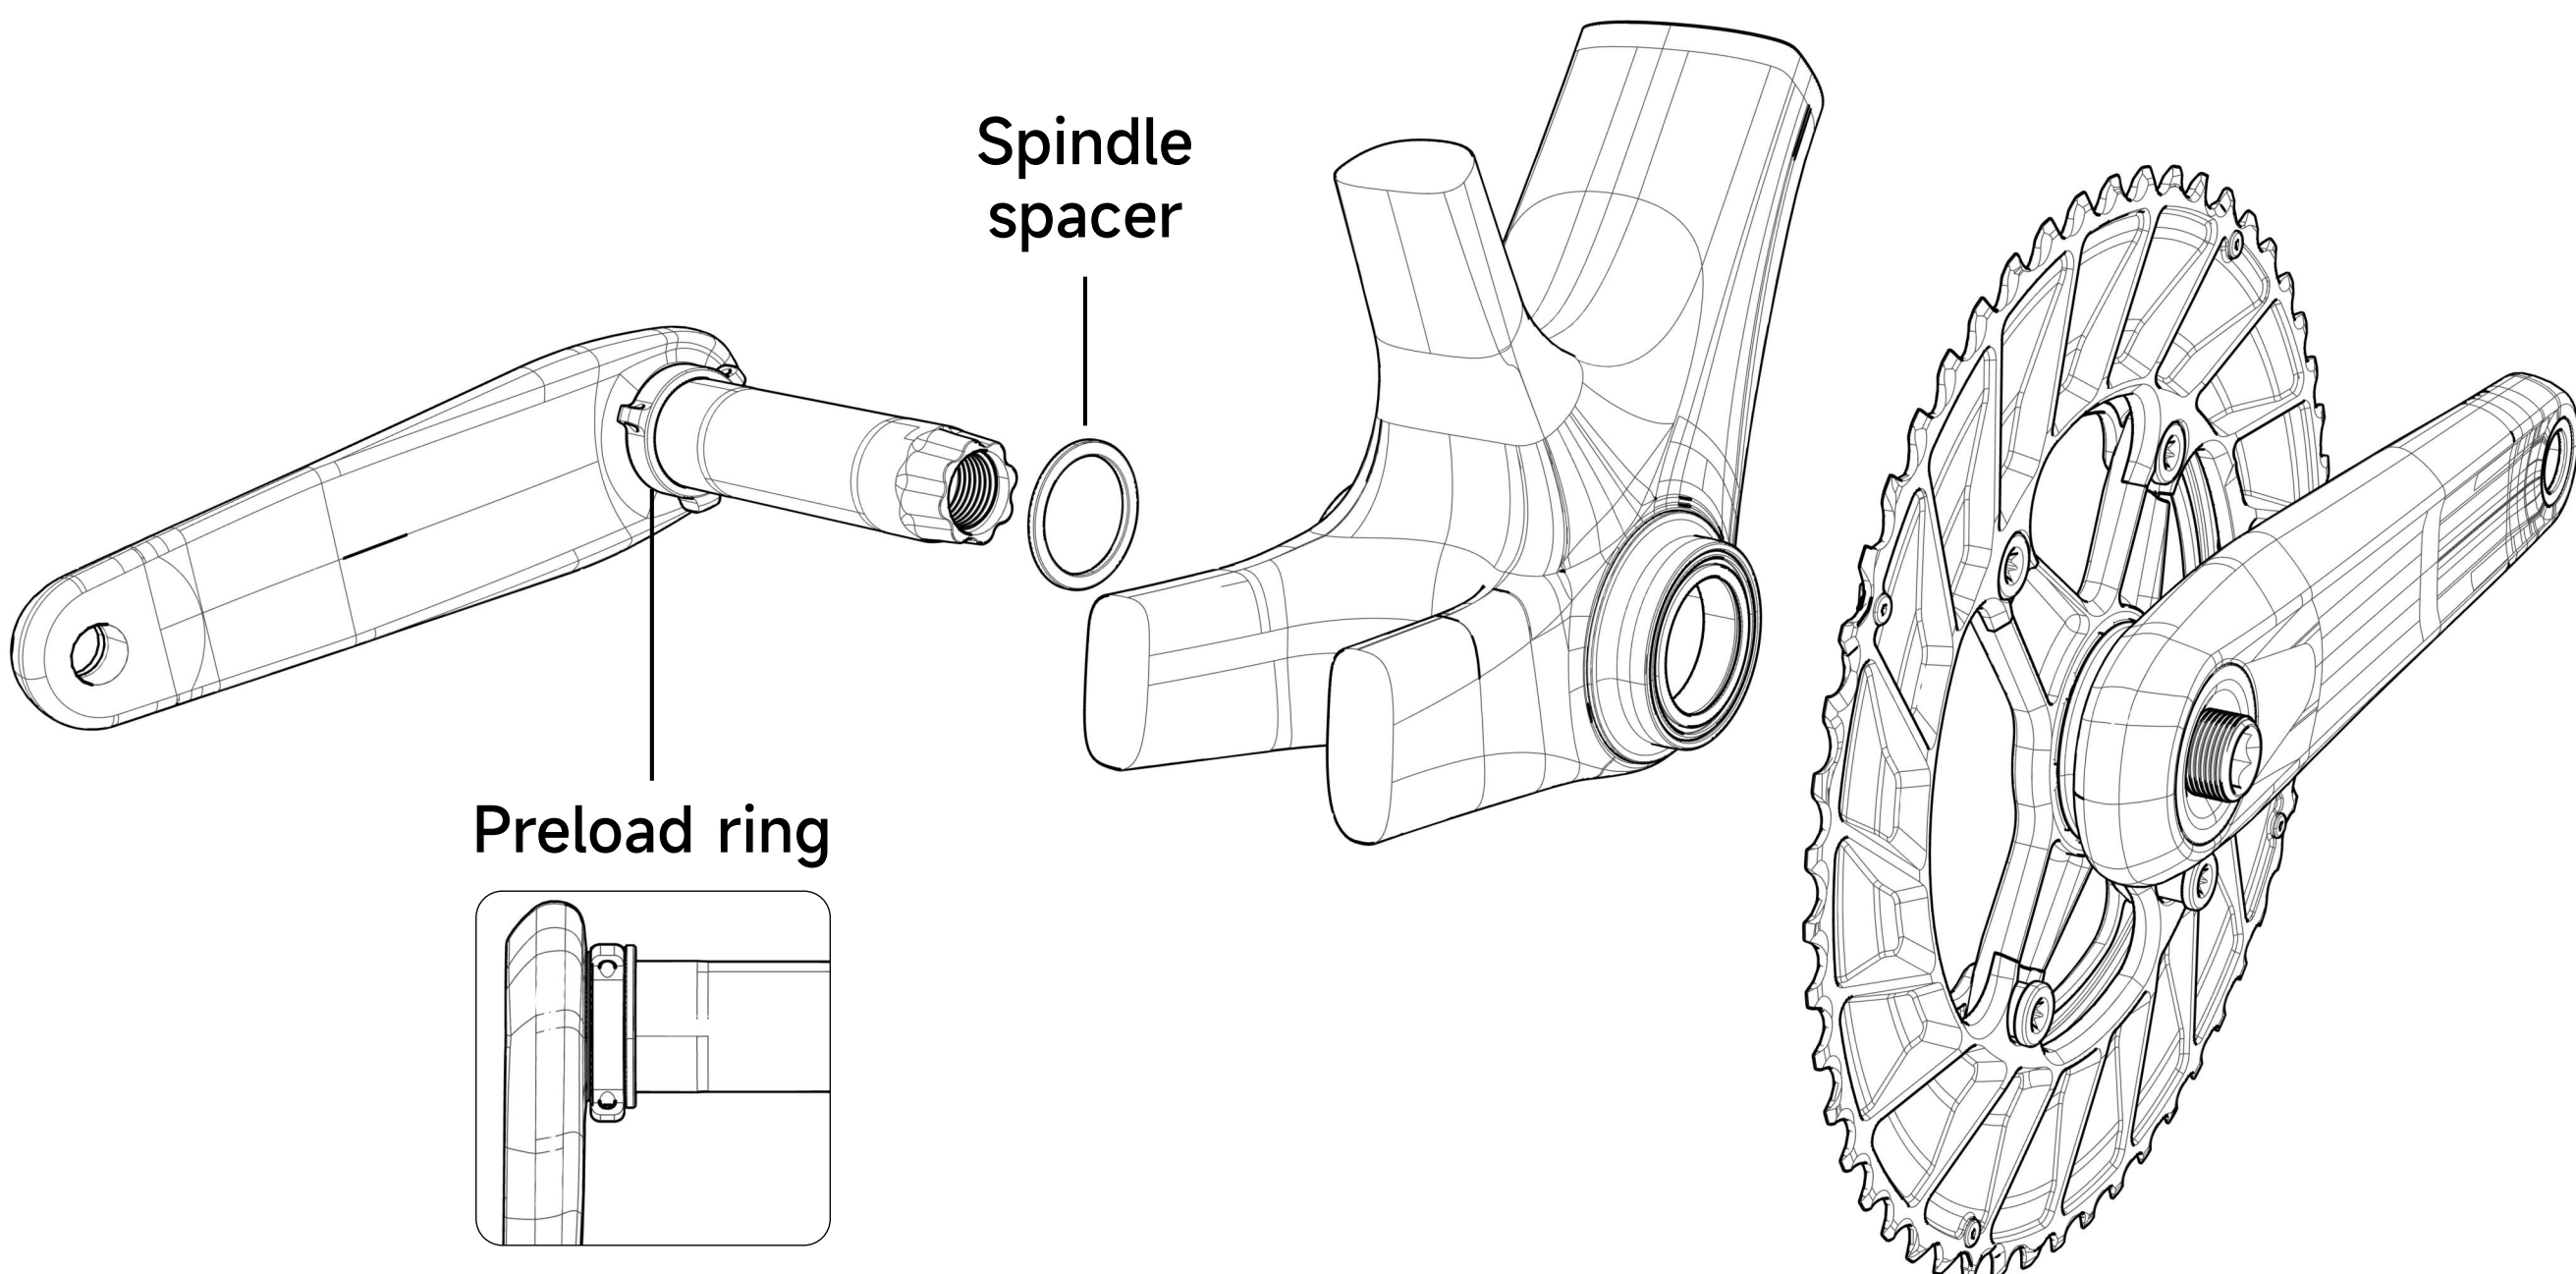

STEP 4

Place the right crank arm on the spline on the spindle, then tighten the dual-threaded bolt to 45Nm, while the bolt was tighten, the top end should be aligned on the outer side of the right crank arm. Adjust it if it was not aligned.

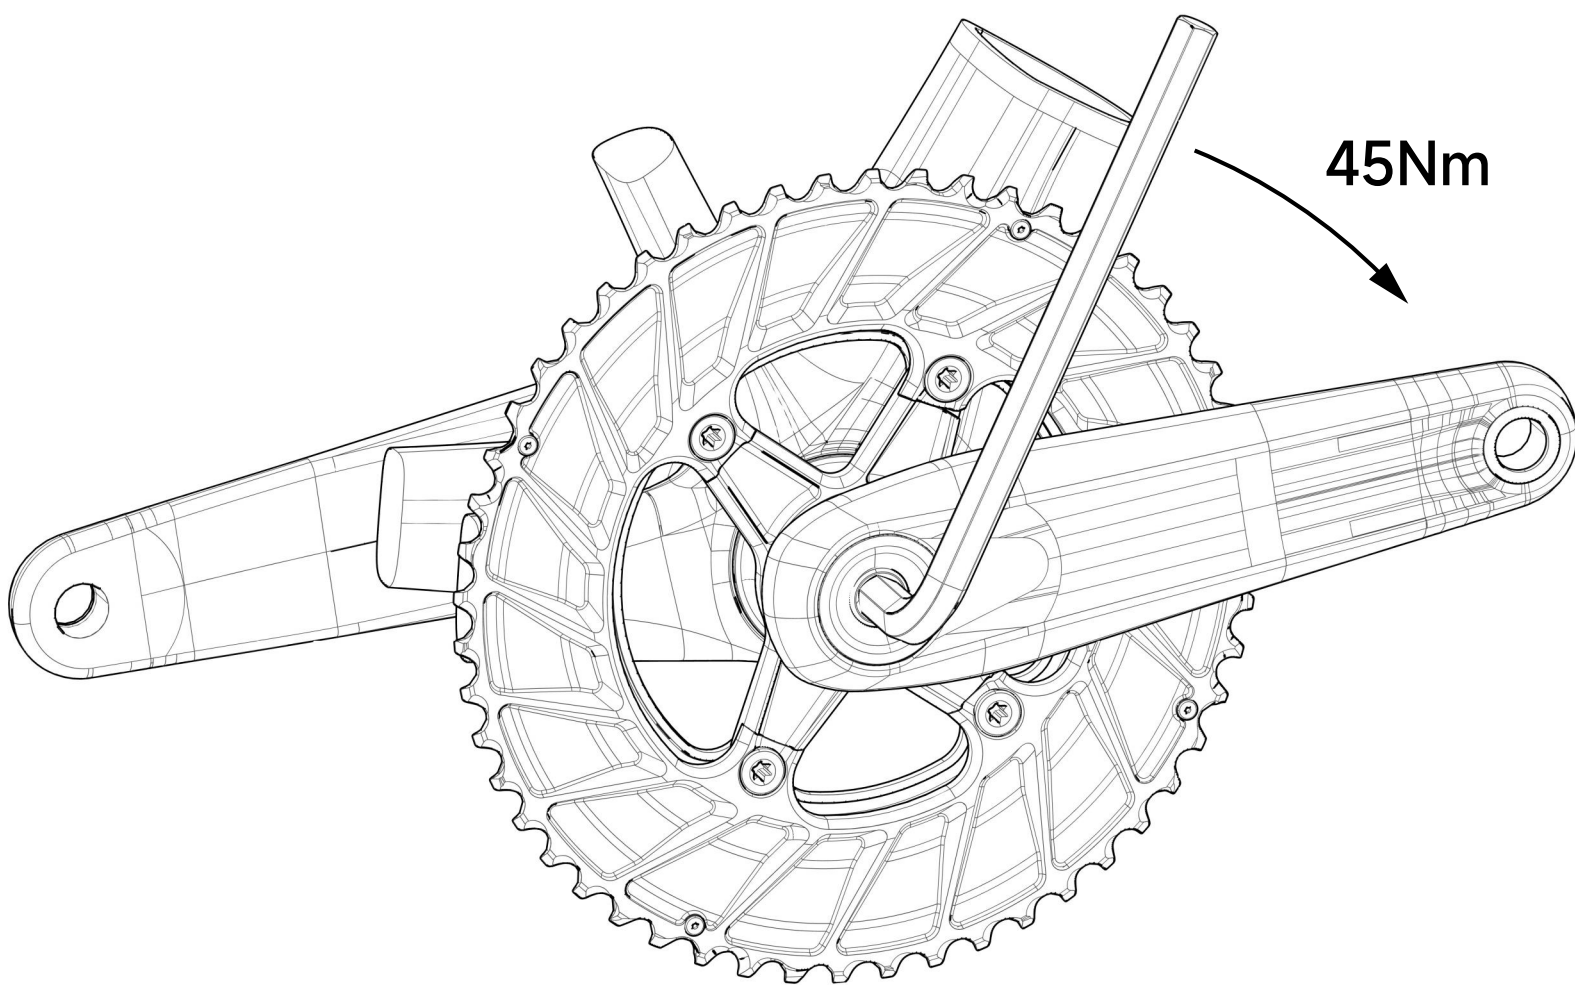

STEP 5

Adjust the preload ring until the crankset has no play on the bottom bracket. Tighten the screw on the preload ring, then the crankset installment was completed.

